



Breckland Trading Company Ltd
www.brecklandtrading.co.uk

Fishley Lane, South Walsham Rd, Acle, Norwich, NR13 3ES
Tel: 01493 751620 Fax: 01493 754081



THE BRECKLAND LOCK-FAST WHEEL LOCK*

Thank you for buying the *BRECKLAND LOCK-FAST Wheel Lock. The specification for the LOCK-FAST Wheel Lock was drawn up to meet three important criteria:

- Offer substantial security
- Be simple to use
- Be a manageable size, so that it could be readily used at any time

We think that you will agree that the LOCK-FAST Wheel Lock fully achieves these aims.

It is extremely easy and quick to fit. Its practical size enables it to be stowed away in a car or caravan for use at any time. Thus the LOCK-FAST can sensibly provide security at all times, whether a vehicle is parked at home, on-route, or away.

The unique design of the lock and lock installation on the BRECKLAND LOCK-FAST significantly enhance the overall level of security offered by the product. Locks used on the LOCK-FAST have 500,000 key combinations.

Contents supplied:

- One LOCK-FAST Wheel Lock
- Two Keys
- Two special high tensile (HT) steel wheel nuts or bolts

Setting up and removal from wheel.

The LOCK-FAST Wheel Lock can be fitted on either side of the caravan or trailer or vehicle although we do prefer the off side. It can face forwards or backwards but it is recommended that it faces forwards. If an attempt is made to tow the vehicle away with the LOCK-FAST in place, if fitted facing forwards, the lock will resist by reacting with the ground. If fitted facing backwards, damage to the underside of the caravan or vehicle could occur.

Remove two of the existing wheel studs placed diagonally across from each other. Replace these with the two special HT studs provided. Ensure that these are tightened up adequately in the normal way. There is a normal setting of 65lb ft for caravan wheel studs. If in any doubt about the tightness of the wheel studs, or any others please consult your Dealer.

Insert the key in the lock and release it open. Apply the LOCK-FAST to the two special studs. The large holes of the key keyhole slot clearly go over the 'Cheese Heads' of the special studs. Rotate a few degrees up or down, the LOCK-FAST will feel to engage itself into the narrow part of the keyhole slot. With the KEY REMOVED, press the lock in to secure your caravan, trailer or vehicle. It is simple to use.

When removing the LOCK-FAST insert and turn the key a quarter of a turn. The lock will spring out under the force of the internal spring. **If it does not** it is not a faulty lock. It will be because of the 12mm diameter lock bar end of the lock unit is binding against the 'Cheese Head' of the special stud. **ACTION** - LOCK-FAST fitted on the off side, pull fully up, fitted on the near side push full down to release, with the lock undone, of course.

MAINTENANCE

To ensure the efficient operation of your LOCK-FAST Wheel Lock the lock itself needs some care and attention. Squirt a little oil into the lock at times. During prolonged winter use, smear a little grease or Vaseline around the key aperture to repel the weather. It is important to keep the 19mm barrel of the lock clean and lubricated to avoid 'striction' i.e. the lock not releasing when the key is turned. The lock is originally lubricated with TRIFLOW. Aerosols can be purchased from Breckland Trading Co.

Spares

Additional wheel bolts and nuts are available as spares. Please ask your Dealer for details.

Warranty

Your LOCK-FAST Wheel Lock has a one year warranty against defects in its manufacture.